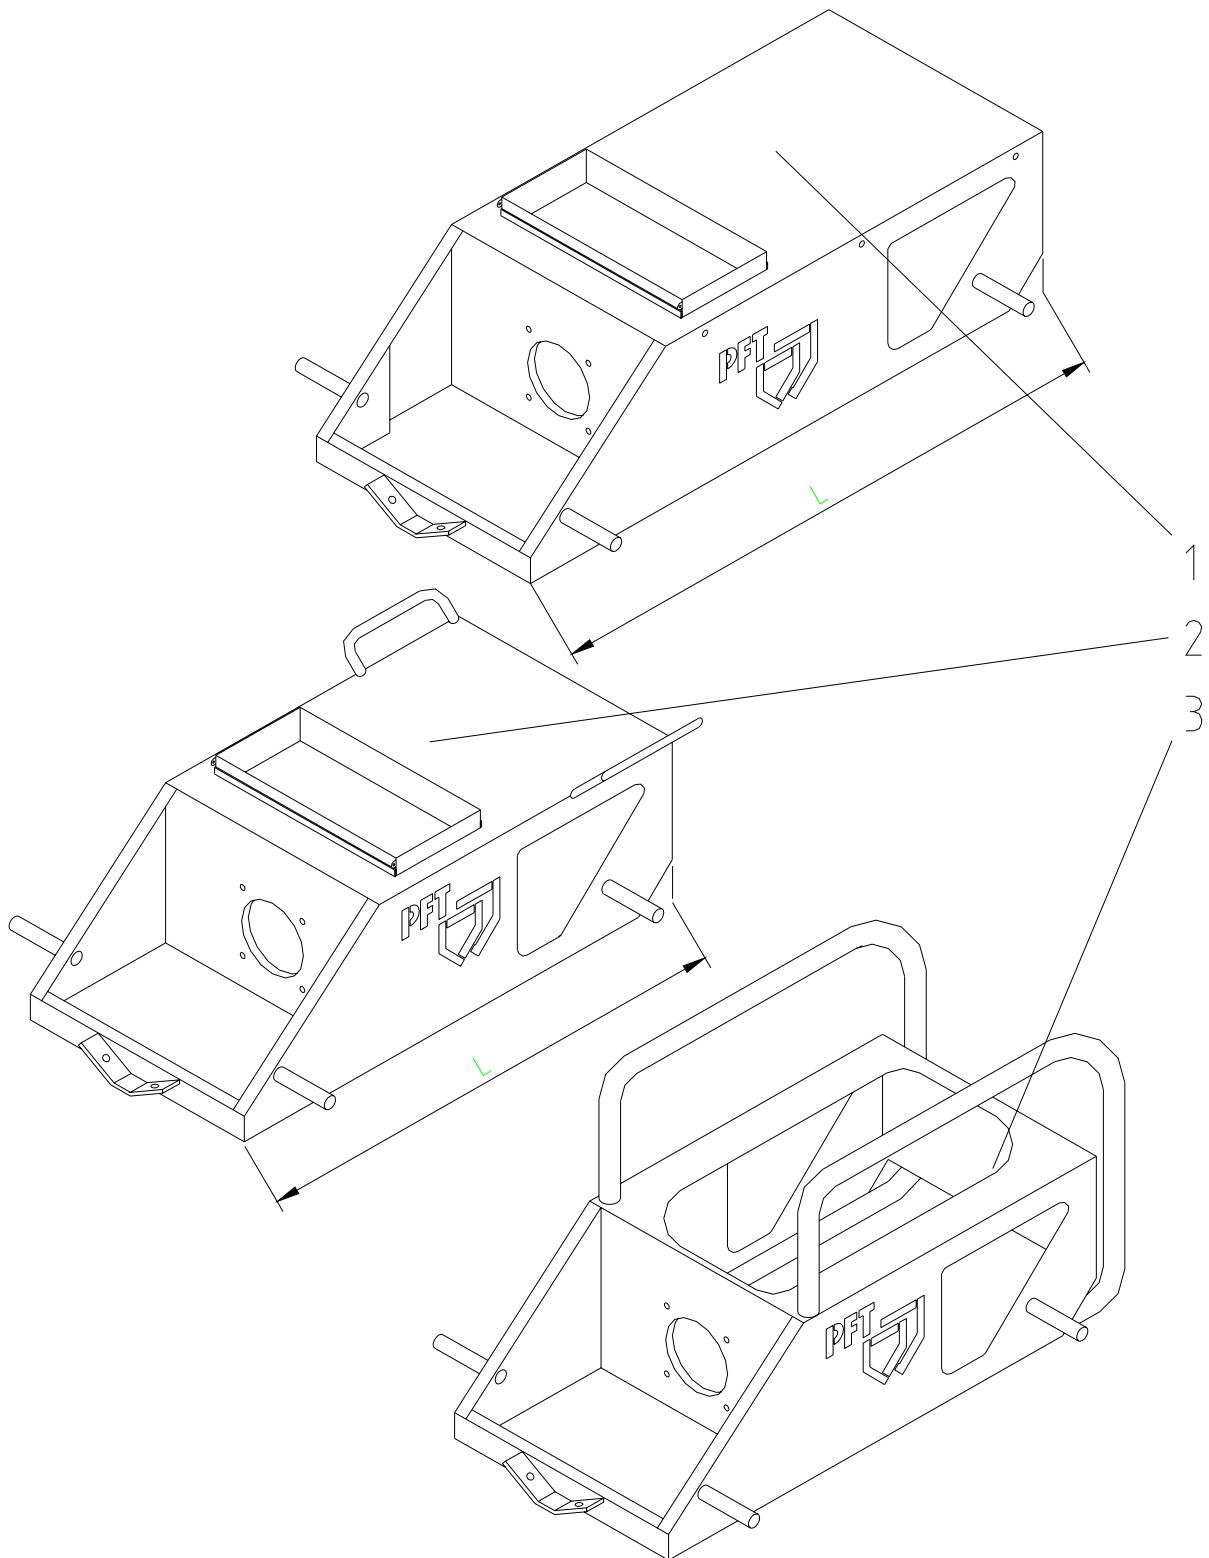


**Contents**


Contents _____	1
Spare parts drawing for Chassis _____	2
Spare parts list for Chassis _____	3
Spare parts drawing for Wheels _____	4
Spare parts list for Wheels _____	5
Spare parts drawing for Castors _____	6
Spare parts list for Castors _____	7

**Spare parts drawing for Chassis**

**Spare parts list for Chassis**

Pos.	Qty.	Item no.	Description
1	1	20175501	Chassis F 2/N 2/T 2 length 885 mm RAL2004
2	1	20175511	Chassis F 2/N 2/T 2 length 760 mm
3	1	20175530	Chassis F 2/N 2, VARIO 3 kW RAL2004


Spare parts drawing for Wheels

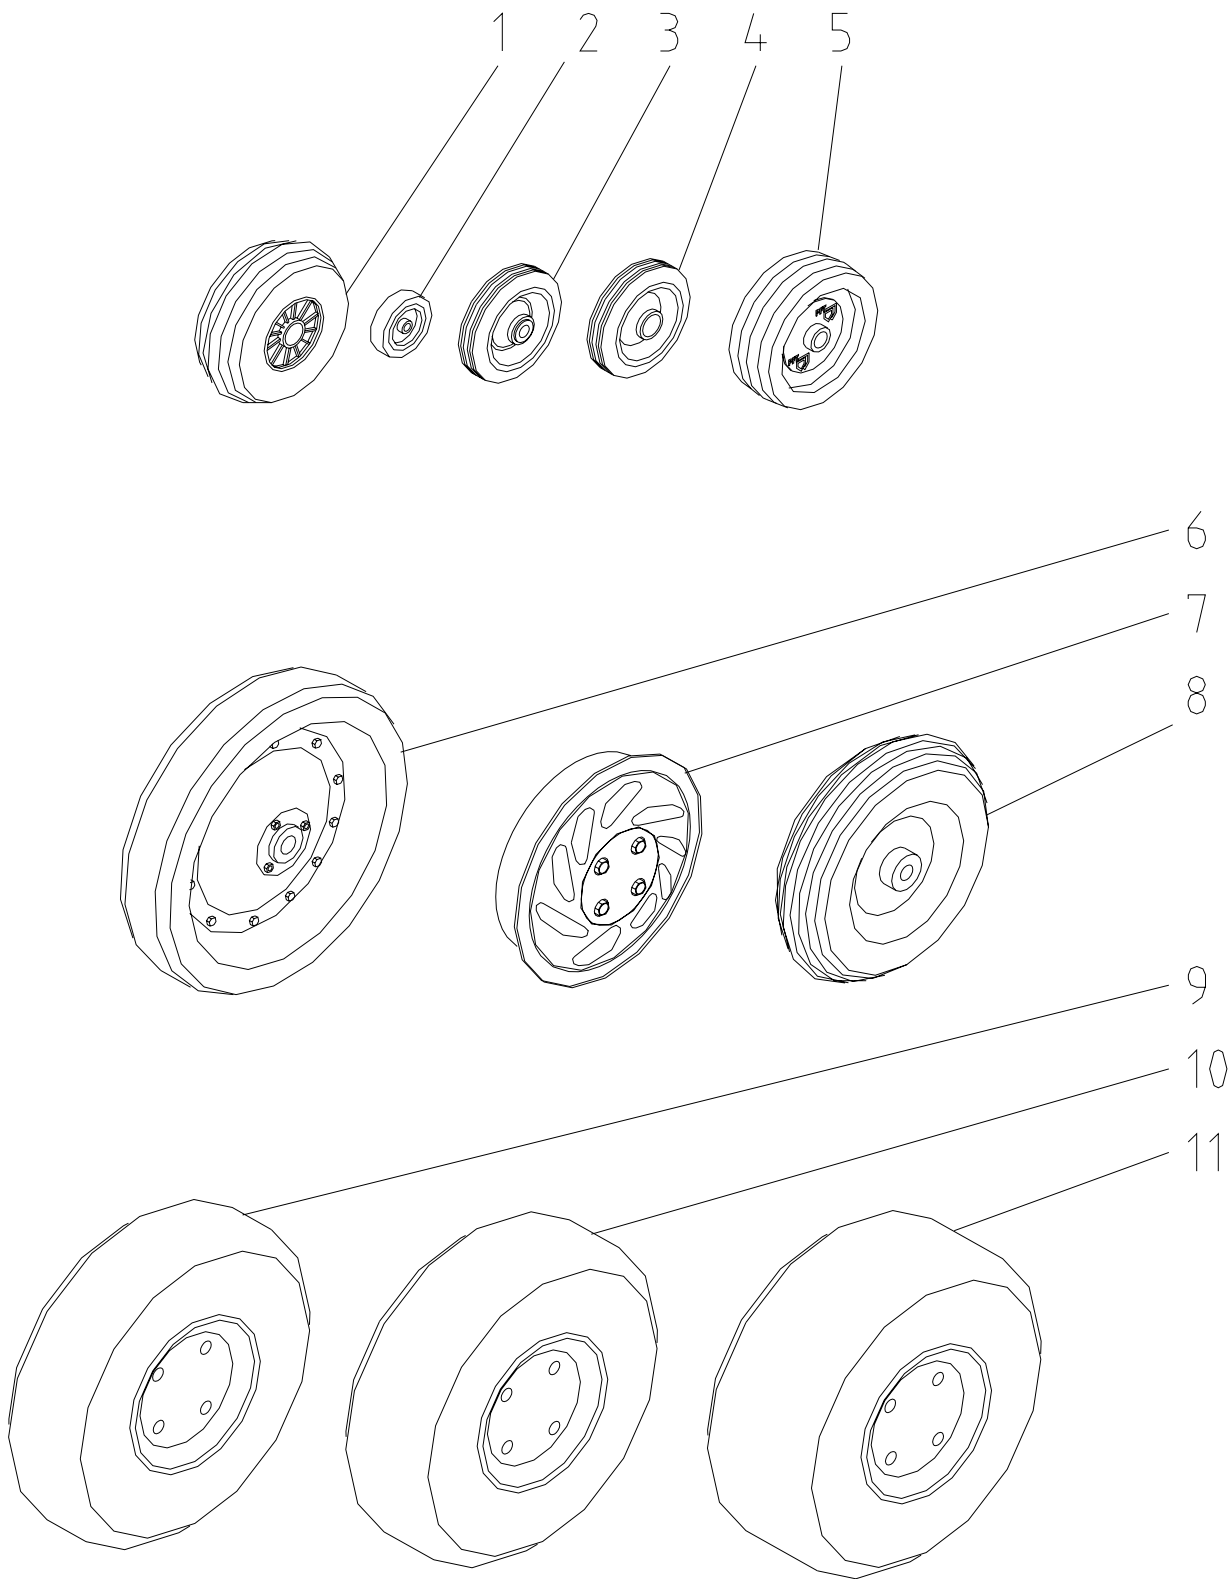

**Spare parts list for Wheels**

Pos.	Qty.	Item no.	Description
1	1	20119701	NO LONGER AVAILABLE, NO REPLACEMENT
2	1	20119352	Wheel 100 x 25 x 12
3	1	20548310	Wheel 180 x 50 x 90
4	1	20122000	Wheel for GX/GXE
5	1	00008254	Replacement wheel 230x85 cover RAL2004
6	1	20119401	Wheel for TM 14 diam 500 mm (rubber)
7	1	20571504	Hub cap painted
8	1	20173500	Wheel (pneumatic) 4.00 x 8
9	1	20171790	Wheel for FMP
10	1	20571501	Wheel 13" cpl. with rim
11	1	20571502	Wheel 175/70 R13" with rim cpl.

Spare parts drawing for Castors

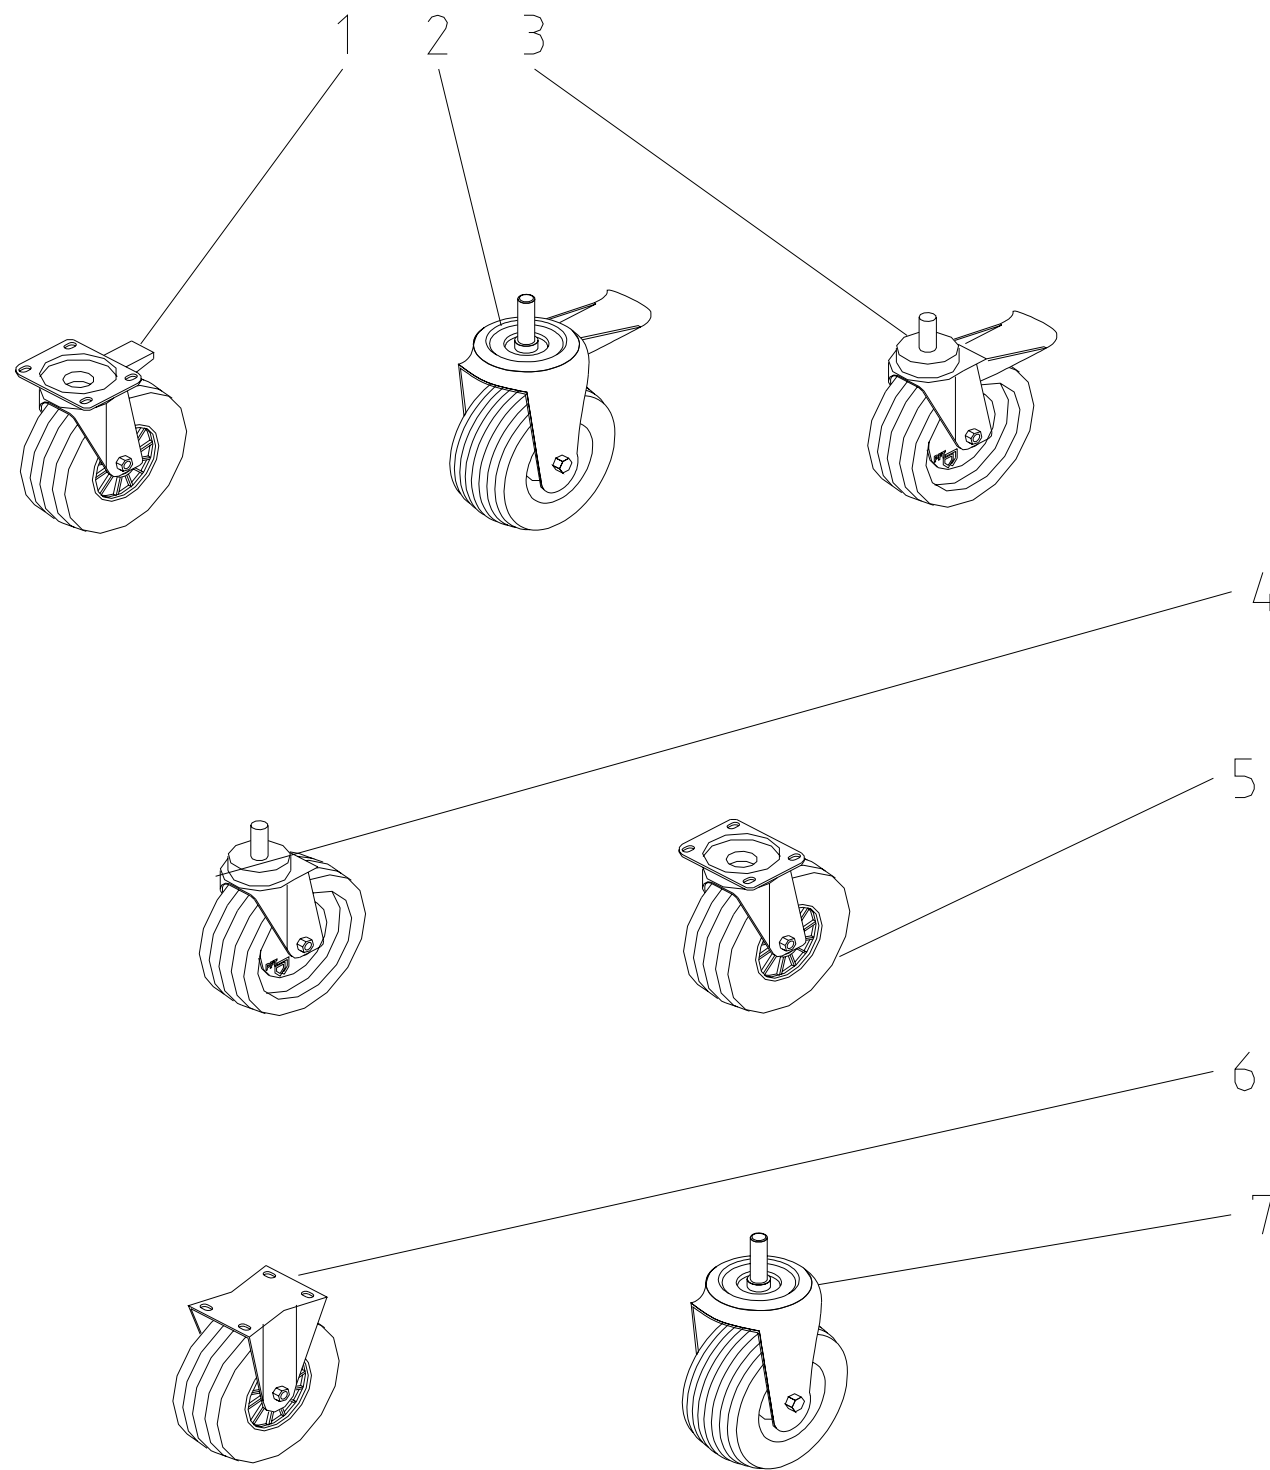

**Spare parts list for Castors**

Pos.	Qty.	Item no.	Description
1	1	00001116	Double lockable castor G 54/G 5 c
2	1	20119311	No longer available, replacement 00 00 11 64
3	1	00001164	Double lockable castor 230 mm black cover
	1	00009089	Double lockable castor 230 mm bearing ratio 300 kg
	1	20119305	NO LONGER AVAILABLE, REPLACEMENT 00001164
4	1	00001163	Castor 230 mm black cover
	1	00009088	Castor 230 mm collapse load 300 kg
	1	20119306	NO LONGER AVAILABLE, REPLACEMENT 00001163
5	1	00001115	Castor for G 5 c/ G 54
6	1	00001114	Castor for G 4.66
7	1	20119302	No longer available, replacement 00 00 11 63